

PSYCHROMETRIC CHART


Normal Temperatures
Barometric Pressures 1013.25 mbar



The new name for JS Humidifiers

FOR EXPERT ADVICE ON ANY HUMIDIFICATION PROJECT CALL +44 (0)1903 850200

www.condair.co.uk

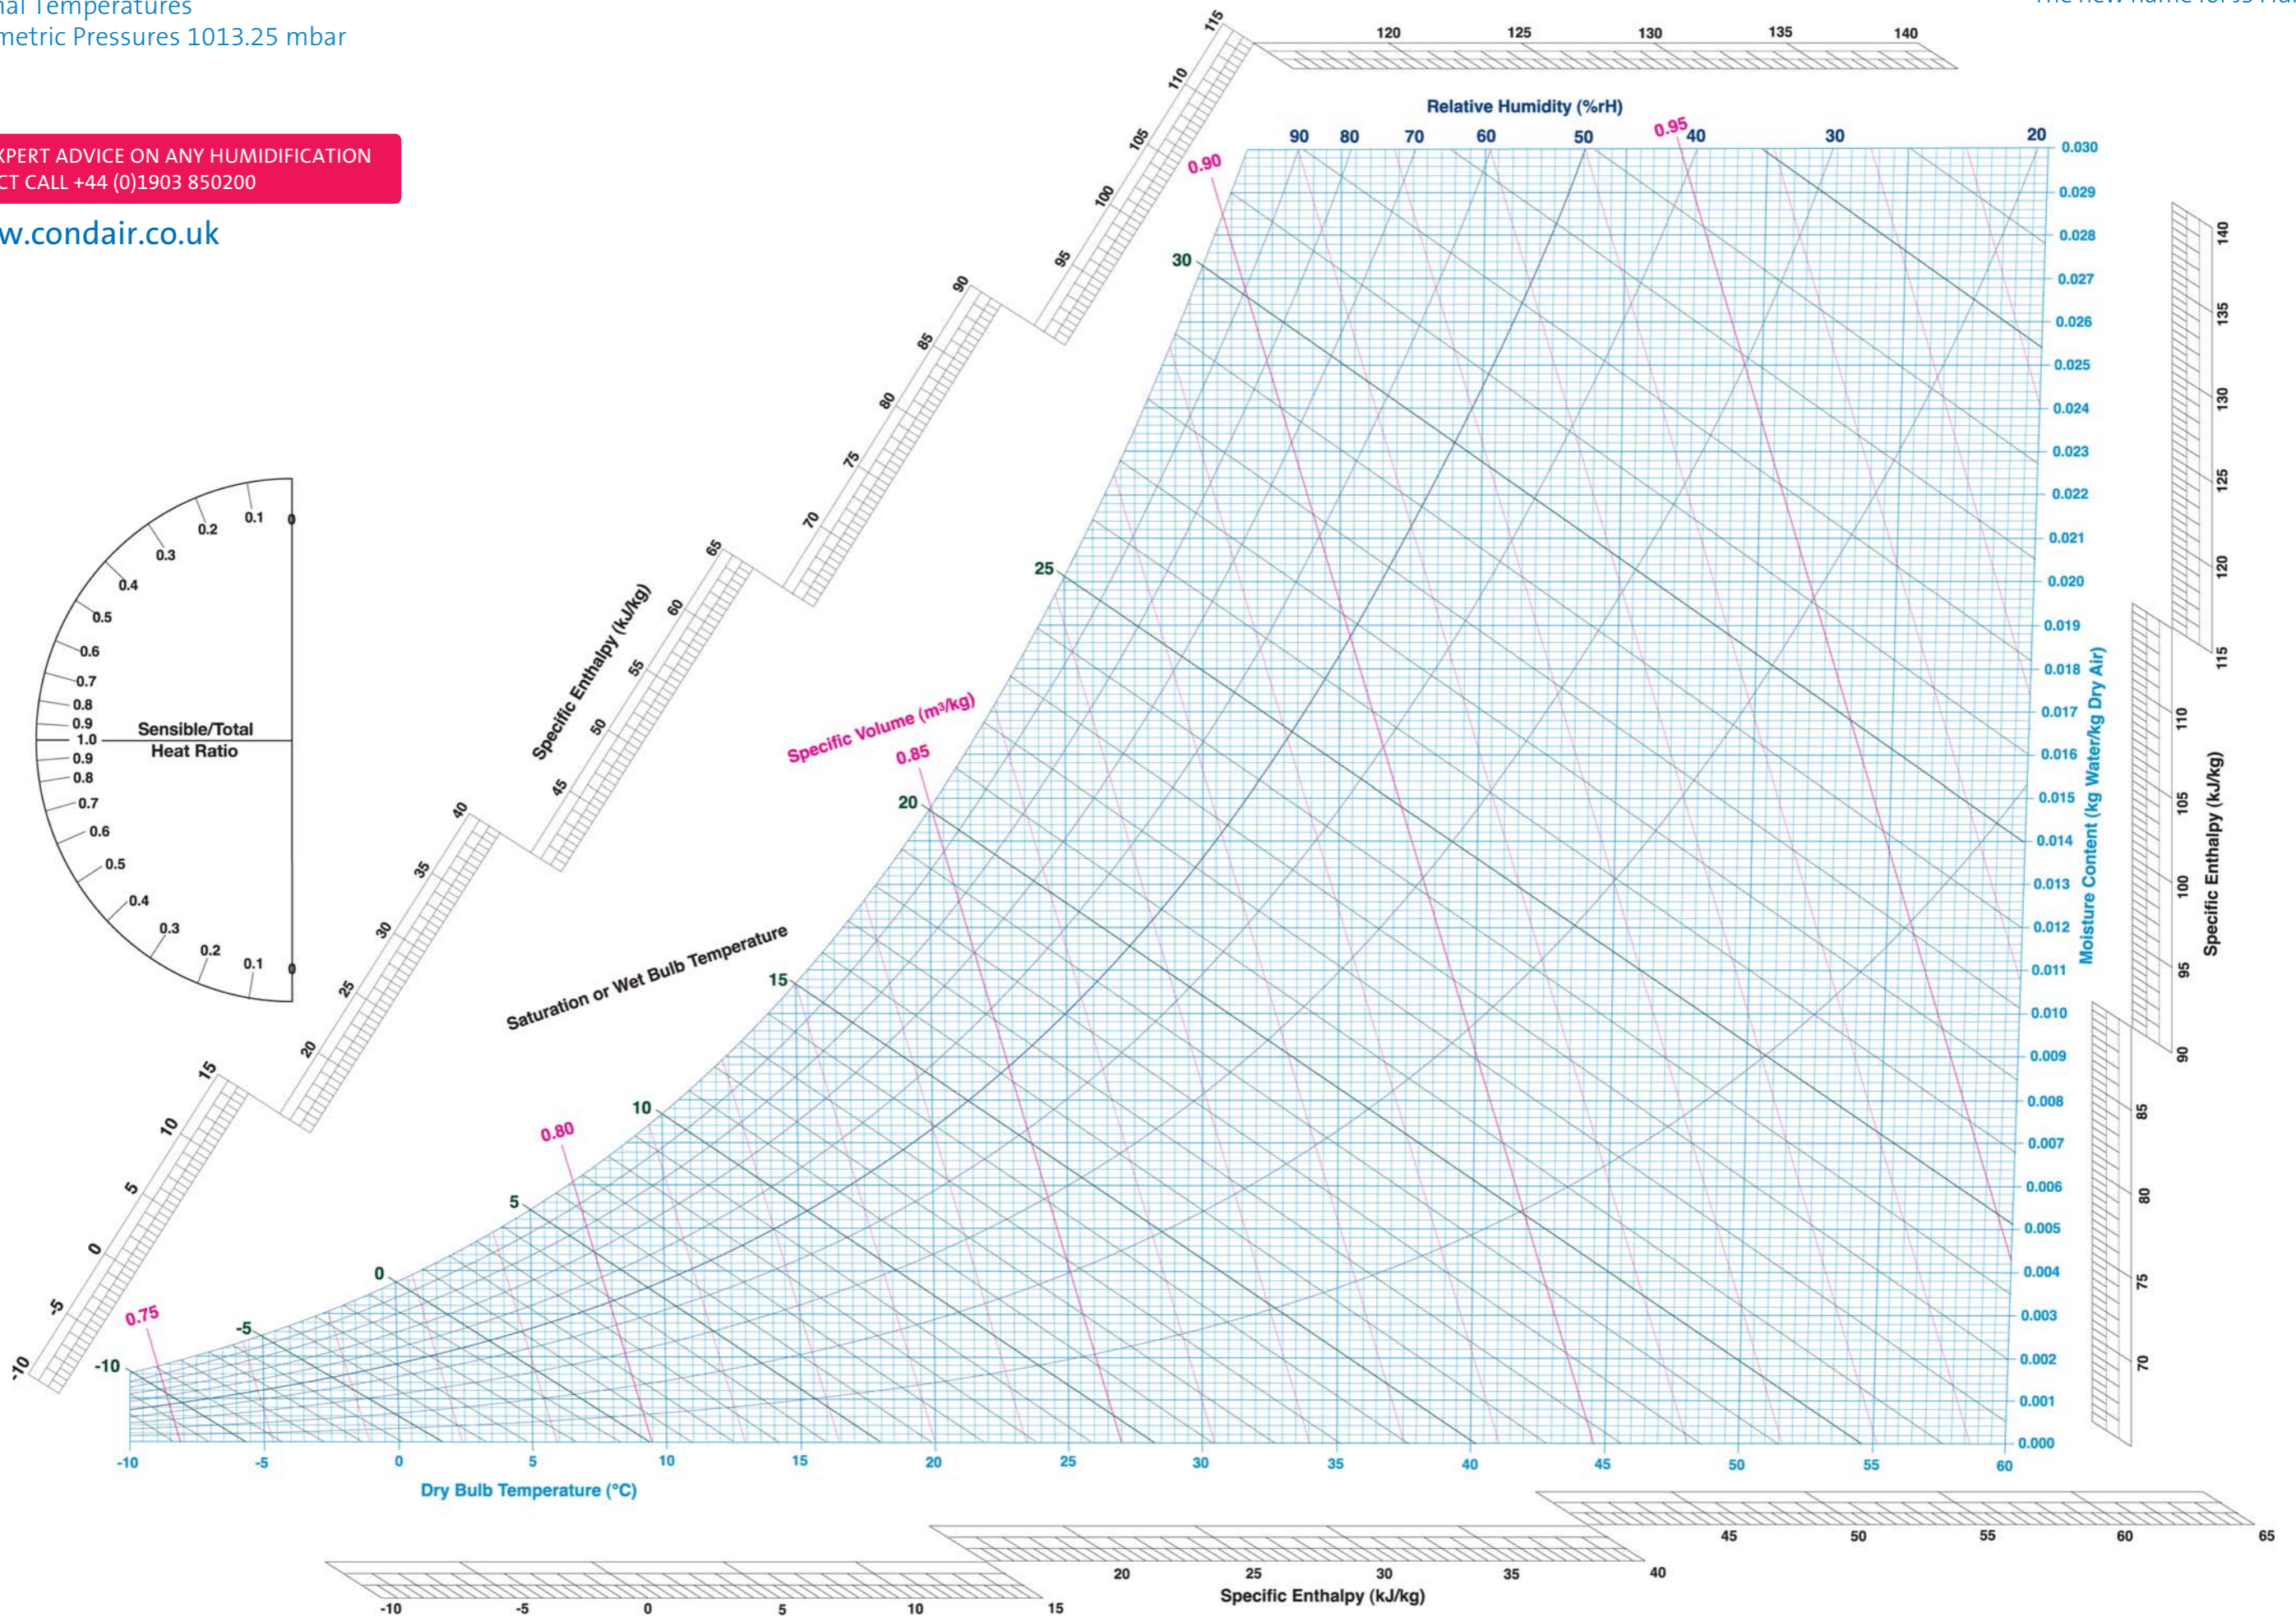


IN-DUCT HUMIDIFIERS

DIRECT ROOM HUMIDIFIERS


PROCESS EXAMPLES

ISOTHERMAL

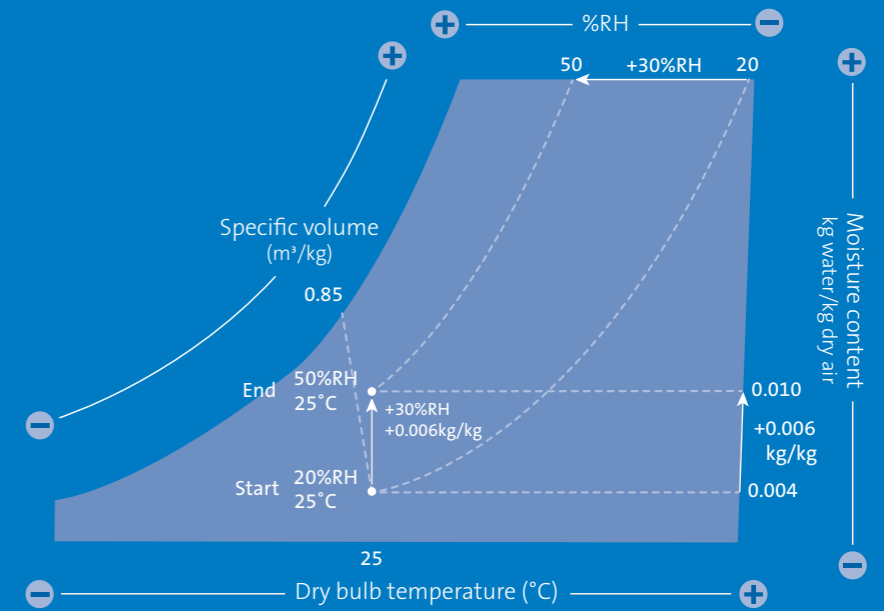

ISOTHERMAL

ADIABATIC

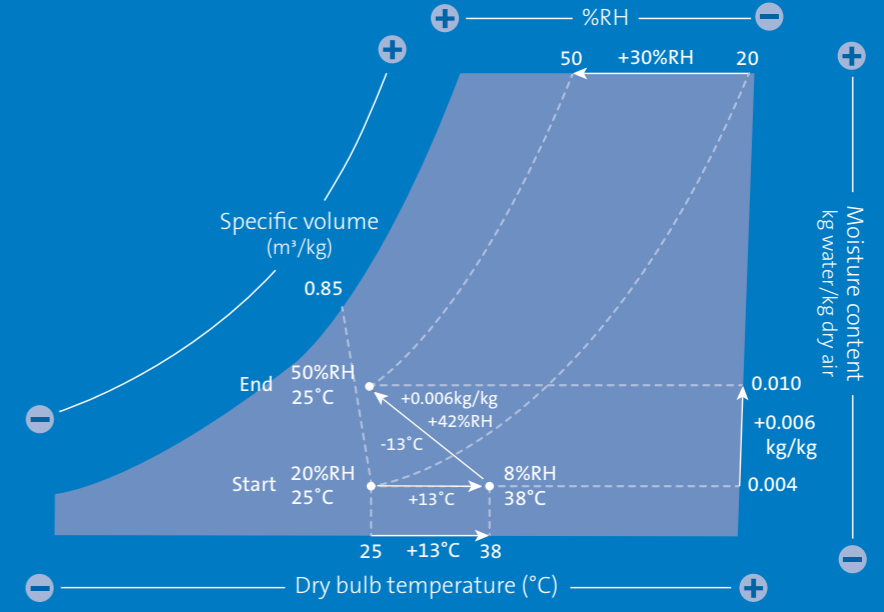

ADIABATIC

IN-DUCT LOAD CALC

The desired room condition is 50%RH at 25°C. An AHU supplies air at 3m³/s. 80% is re-circulated from the building itself and 20% is fresh air, which is pre-heated to 25°C (min 20%RH prior to humidifier).

The required humidifier duty is:

$$\frac{\text{Moisture x air vol x fresh air \%}}{\text{Specific volume}} = \text{humidity load}$$

$$\frac{0.006\text{kg/kg} \times 3\text{m}^3/\text{s} \times 3,600 \times 0.2}{0.85\text{m}^3/\text{kg}} = 15.25\text{kg/h}$$

DIRECT ROOM LOAD CALC

The desired room condition is 50%RH at 25°C in a production area of 3,600m³ with 2.5 air changes per hour and a current minimum humidity of 20%RH.

The required humidifier duty is:

$$\frac{\text{Moisture x air vol x no. of air changes}}{\text{Specific volume}} = \text{humidity load}$$

$$\frac{0.006\text{kg/kg} \times 3,600\text{m}^3 \times 2.5}{0.85\text{m}^3/\text{kg}} = 63.53\text{kg/h}$$

CALC EXAMPLES

FREE 1HR IN-HOUSE
CPD SEMINARS

LEARN
HUMIDIFICATION &
PSYCHROMETRICS

VISIT
CONDAIR.CO.UK/CPD

CALCULATE
HUMIDITY LOADS
WITH OUR ONLINE
PSYCHROMETRIC
CALCULATOR

VISIT
CONDAIR.CO.UK/PSYC

FREE RUN COST &
CARBON FOOTPRINT
ANALYSIS

FIND OUT SYSTEM
PAYBACK TIMES

CALL
+44 (0)1903 850200